

Process to change the airbag cable in Altirando 2 and Altirando 2 RS

Difficulty : ●○○○○○ very easy
Material needed : - 3 steps machine
- Serafil 30
- Cutting pliers
- Scalpel
- Cable ref: (MPPM017)


1. Put the harness on his side



2. Put your hand inside the airbag valve. Take the cable and pull it out of the harness.



3. The cable is inside the eadging.

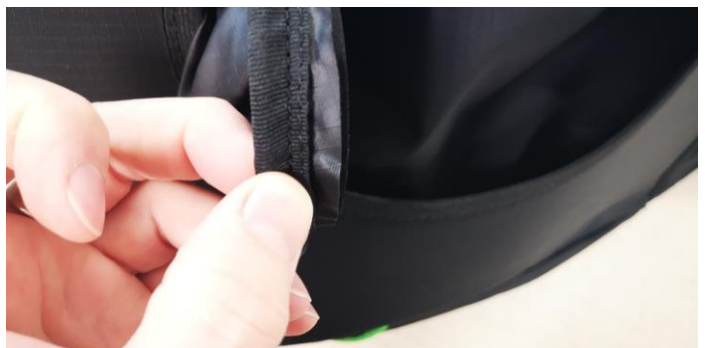

Process to change the airbag cable in Altirando 2 et Altirando 2 RS

4. Unstitch the eadging on 5 to 6 cm




5. Pull the cable and remove it completely. (note the cable can be yellow or black. The color does not matter, the cable is the same)




6. Cut the new cable in order to have exactly the same length. (The spare cable is black (ref MPPM017) . We keep the yellow cable to make picture more understandable.).

Burn and make the extremity of the cable round. It should be very smoth to get back in the harness.

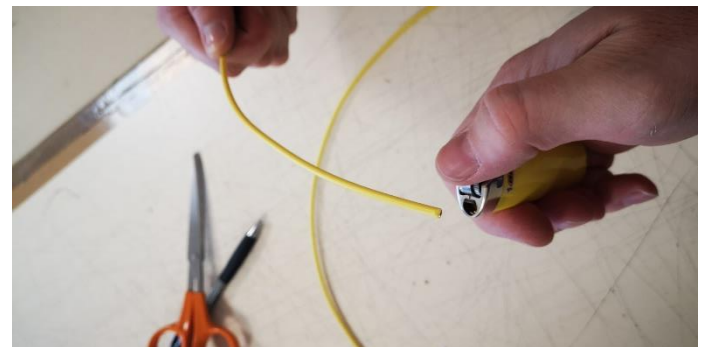

7. Put back the cable inside the eadging. Use vaseline oil if needed.

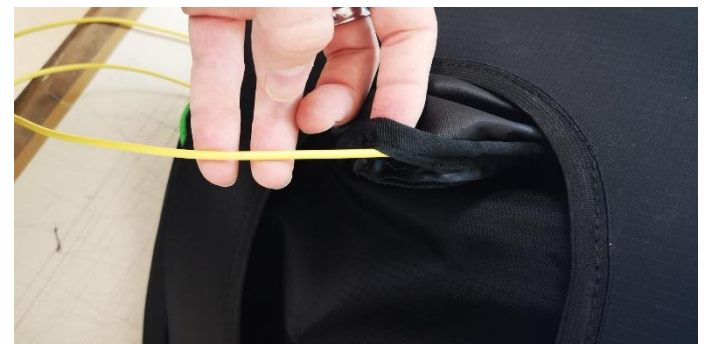

Process to change the airbag cable in Altirando 2 et Altirando 2 RS

8. Push the cable to the end of the first side.


Then you can you push the other side of the cable into the eadging.



9. Close the eading in the right position with pins.



10. Sew the eadging with the Serafil 30.

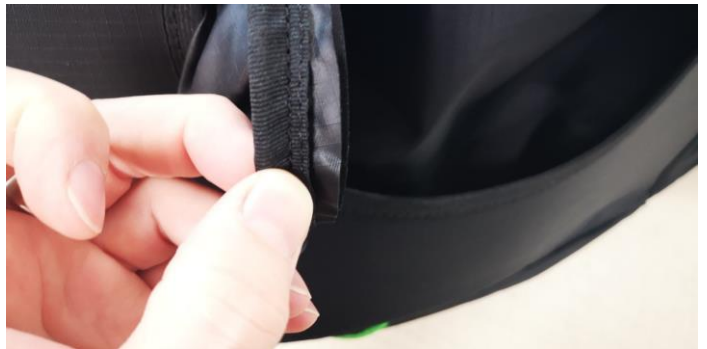

11. Put the inside part of the airbag back in the harness and control the operation is invisible from outside.

